



# BRESSER®

 
 
 
## Temeo Hygro Quadro

 
Art. No. 70-00020



**GB** INSTRUCTION MANUAL

**Attention! For first time operation and battery replacement:  
First insert batteries for main unit and then insert batteries for  
outdoor sensor.**

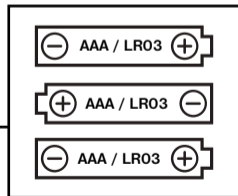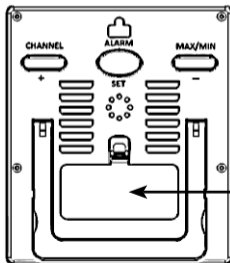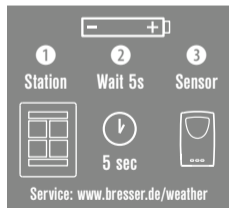


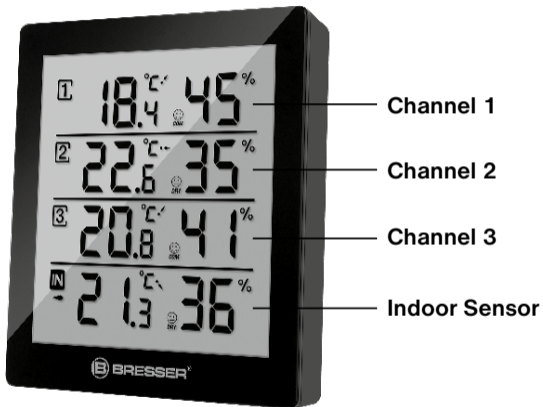

A.



 B.

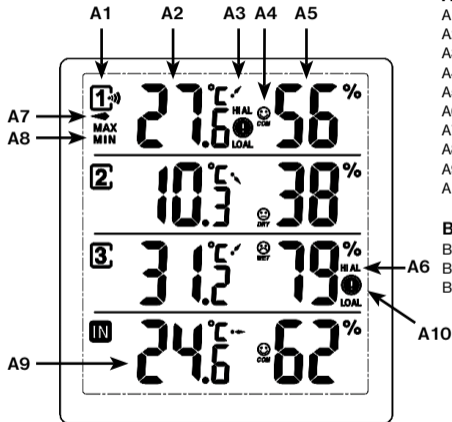


### A. Display

- A1: Channel number with reception and battery symbol
- A2: Temperature
- A3: Temperature tendency indicator
- A4: Comfort level symbol
- A5: Humidity
- A6: Hi-/Low-Alarm for temperature /humidity
- A7: Marking for selected channel
- A8: Symbol for MAX/MIN
- A9: Display for internal temperature and humidity
- A10: Alarm symbol for temperature/humidity


### B. Buttons

 - B1: CHANNEL/ + button
- B2: ALARM/ SET button
- B3: MIN/MAX/ - button

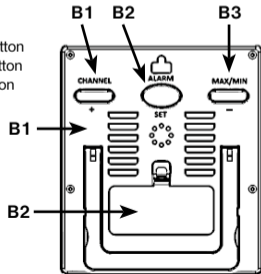


### C. Housing

 - C1: Housing body
- C2: Battery compartment (3x AAA battery)
- C3: Wall mounting hole
- C4: Stand

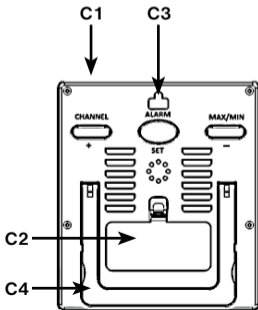

### D. Outdoor Sensor

 - D1: Display, temperature and humidity
- D2: Channel number, as Channel 1, Channel 2, Channel 3
- D3: Transmission signal lamp
- D4: Wall mounting hole
- D5: Battery compartment (2x AAA battery)
- D6: °C and °F switch
- D7: Corresponding Channel switch

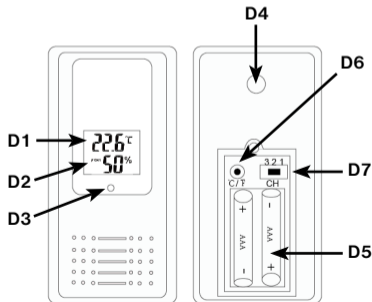

## About this manual

Please read the safety instructions and the user manual carefully before using the device.

## GENERAL WARNINGS



### **RISK OF CHOKING!**

Keep packaging material, like plastic bags and rubber bands, out of the reach of children, as these materials pose a choking hazard.



### **RISK of ELECTRIC SHOCK!**

This device contains electronic components that operate via a power source (Batteries). Only use the device as described in the manual; otherwise, you run the risk of an electric shock.



### **RISK of FIRE/EXPLOSION!**

Do not expose the device to high temperatures. Use only the recommended batteries. Do not short-circuit the device or batteries, or throw them into a fire. Excessive heat or improper handling could trigger a short-circuit, a fire or an explosion.



### **RISK of property damage!**

Do not disassemble the device. In the event of a defect, please contact your dealer. The dealer will contact the Service Centre and can send the device in to be repaired, if necessary.



### **ATTENTION!**

Use only the recommended batteries. Always replace weak or empty batteries with a new, complete set of batteries at full capacity. Do not use batteries from different brands or with

different capacities. Remove the batteries from the unit if it has not been used for a long time.

## **!** ATTENTION!

The manufacturer is not liable for damage related to improperly installed batteries!

### **SCOPE OF DELIVERY**

Main unit (A), Remote sensor (B), Instruction manual

Required batteries (not included with purchase):

3x AAA / LR03 (1.5V) for Main Unit

6x AAA / LR03 (1.5V) for Outdoor Sensors

### **INSTALLATION OF MAIN UNIT**

1. Open the battery compartment of the main unit and insert three new batteries 1,5V AAA, polarity as illustrated.
2. ALL LCD segments will be displayed for about a few seconds.
3. Close the battery compartment.

### **INSTALLATION OF OUTDOOR SENSOR**

1. Open the battery compartment of the outdoor sensor with a screwdriver.
2. Insert two new batteries 1,5 AAA, the display shows the temperature and humidity and the Channel number 1.
3. Press the °C and °F switch (D6) to select temperature unit.
4. Use the Channel switch (D7) to change between Channel 1, Channel 2 or Channel 3. There are a total of 3 outdoor sensors, set all 3 to different channels.

### **MAIN UNIT**

1. The measurements of the installed outdoor sensors will be transmitted to the main unit and the radio-controlled reception symbol (A1) appears.
2. If the reception is successful, the display will show temperature and humidity of the respective outdoor sensor, the temperature

trend symbol (A3) and the symbol of the comfort level (A4).

3. Then the radio-controlled reception symbol disappears.
4. In the display section 4, the measured values of the internal sensor (Indoor) will appear.
5. If the values are not received from a channel, '–' appears on the display, check the batteries and try it again. Check if there is any source of interference.
6. You can start the initialization manually.
7. Button function:

#### **(1) CHANNEL / + button**

- A. Press it to select different display sections.
- B. In setting mode, press it equals to UP.
- C. Press and hold to enforce radio controlled reception.

[1] press the CHANNEL/+ button until the arrow (A7) appears on the desired channel. Channel 1, 2 or 3, or IN for enforce a radio

controlled reception for all outdoor sensors simultaneously.

- [2] press and hold this button for 3 seconds to search for signals from the desired outdoor sensor.
- [3] the radio-controlled reception symbol (A1) appears.
- [4] the basic station will scan the measurements.
- [5] If the reception is successful, the display will show temperature and humidity of the desired outdoor sensor, the temperature trend symbol (A3) and the symbol of the comfort level (A4).
- [6] Then the radio-controlled reception symbol disappears.

#### **(2) MIN/MAX / - button**

- A. In normal mode, press and hold it more than 3 seconds to switch °C and °F.
- B. Press this button, MAX appears on the display.
- C. On the display appear the maximum values



since the last reset.

- D. Press and hold the MIN/MAX- button to delete the maximum values of the currently selected channel.
- E. Press this button again
- F. MIN appears on the display
- G. On the display appear the minimum values since the last reset.
- H. Press and hold the MIN/MAX- button to delete the minimum values of the currently selected channel.
- I. Press again to go back to the display of the present values.

NOTE: press and hold the MIN/MAX /- or CHANNEL / + button for a fast running.

## SETTING OF THE ALARM FOR THE TEMPERATURE AND HUMIDITY

### 1. Temperature alarm

- (1) press the CHANNEL /+ button until the arrow appears on the desired channel (channel 1-3, IN)
- (2) Press and hold ALARM / SET button for 3 seconds.
- (3) HI AL and upper temperature limit (CH 1-3: 70°C - default, IN: 60°C) starts flashing on the display.
- (4) Press the CHANNEL /+ or MIN/MAX /- button to adjust the desired upper temperature limit.

**NOTE: press and hold the MIN/MAX /- or CHANNEL / + button for a fast running.**

- (5) press and hold the ALARM / SET button after setting the value when still flashing to activate the alarm function.
- (6) The alarm symbol (A10) appears on the display

- (7) Save the setting with the ALARM / SET button
  - (8) LO AL and lower temperature limit (CH 1-3: -50°C - default, IN: -9.9°C) starts flashing on the display.
  - (9) Press the CHANNEL / + or MIN/MAX /- button to adjust the desired lower temperature limit.
  - (10) Press and hold the ALARM / SET button after setting the value when still flashing to activate the alarm function.
  - (11) The alarm symbol (A10) appears on the display.
  - (12) Save the setting with the ALARM / SET button.
- 2. Humidity alarm**
- (1) HI AL and upper humidity limit (CH 1-3: 95% - default, IN 95% ) starts flashing on the display (channel 1-3, IN)
  - (2) Press the CHANNEL / + or MIN/MAX/- button to adjust the desired upper humidity limit
  - (3) press and hold the ALARM / SET button after setting the value when still flashing to activate the alarm function
  - (4) The alarm symbol (A10) appears on the display
  - (5) Save the setting with the ALARM / SET button
  - (6) LO AL and lower humidity limit (CH 1-3: 20% - default, IN: 20%) starts flashing on the display.
  - (7) Press the CHANNEL / + or MIN/MAX /- button to adjust the desired lower humidity limit.
  - (8) Press and hold the ALARM / SET button after setting the value when still flashing to activate the alarm function.
  - (9) The alarm symbol (A10) appears on the display.

(10) Save the setting with the ALARM / SET button.

### DISPLAY OF ADJUSTED ALARM VALUES

1. Press the ALARM /SET button in normal mode to show the adjusted upper alarm limits
2. Press again the ALARM / SET button in normal mode to show the adjusted lower alarm limits
3. Press again this button to return to normal display

### DEACTIVATING /ACTIVATING THE ALARM

- (1) Press the CHANNEL / + button until the arrow appears on the desired channel.
- (2) Press and hold ALARM / SET button for 3 seconds.
- (3) Upper Temperature Alert limit starts flashing on the display
- (4) In Temperature and Humidity Alarm Mode,

each press of ALARM / SET button rotates between:

- Upper Temperature Alert
- Lower Temperature Alert
- Upper Humidity Alert
- Lower Humidity Alert

- (5) When the above alerts are displayed, pressing ALARM/SET button for 3 seconds will deactivate/activate the corresponding alert.
- (6) The alarm symbol (A10) disappears/appears on the display.
- (7) Save the setting with the ALARM / SET button.

### DISABLING WHEN ALARMS ARE ACTIVATED

Press ALARM/SET button to stop the alarm sound. HI AL or LO AL still flashing on the display.

## COMFORT LEVEL

	Temperature range	Humidity range
COM	20-28 °C	40-70%
WET		>65%
DRY		<45%

## EC DECLARATION OF CONFORMITY



Bresser GmbH declares that the device (Weather station/Art.Nr.: 70-00020) is in accordance with

applicable guidelines and corresponding standards of the 1999/5/EG directive.

## CLEANING AND MAINTENANCE

Before cleaning the device, disconnect it from the power supply (remove batteries)! Only use a dry cloth to clean the exterior of the device. To avoid damaging the electronics, do not use any cleaning fluid.

## DISPOSAL



Dispose of the packaging materials properly, according to their type, such as paper or cardboard. Contact your local waste-disposal service or environmental authority for information on the proper disposal.



Do not dispose of electronic devices in the household garbage!

■ As per Directive 2002/96/EC of the European Parliament on waste electrical and electronic equipment and its adaptation into German law, used electronic devices must be collected separately and recycled in an environmentally friendly manner.

## **WARRANTY & SERVICE**

The regular guarantee period is 2 years and begins on the day of purchase. To benefit from an extended voluntary guarantee period as stated on the gift box, registration on our website is required. You can consult the full guarantee terms as well as information on extending the guarantee period and details of our services at [www.bresser.de/warranty\\_terms](http://www.bresser.de/warranty_terms).

Errors and technical changes reserved.  
ANL7000020GB0616BRESSER



Besuchen Sie uns auf • Find us on:



**Bresser GmbH**

Gutenbergstr. 2 · DE-46414 Rhede  
Germany

[www.bresser.de](http://www.bresser.de) · [service@bresser.de](mailto:service@bresser.de)