

# OWNER'S MANUAL

## ***PINPOINTER***



MPP Rev.4 062714

### ***PinPointer***

#### ***For Treasure Hunting and unearthing small objects***

After identifying the presence of a metal object in the ground with a metal detector, pinpointing its exact location and separating it from the earth can be difficult and time consuming.

With the PinPointer, retrieving coins and other small metal objects is easy.

### ***Unearthing Small Objects***

A buried object, can be indistinguishable from the soil it is buried in, especially after the passage of time. In addition, historical objects will lose value if damaged in the unearthing process.

It is therefore recommended to use the PinPointer in a probing or sifting process. The tip of the PinPointer will detect a coin-sized metal object approximately 3/4" away from the tip of the probe. Probe the tip of the PinPointer directly into the ground; poke around directly on the surface in different areas until the internal buzzer activates. If the earth is loose enough, lift handfuls of soil out of the ground and probe in the palm of your hand with the PinPointer.

# Operation

1. Install Battery (see Figure A)
2. Click On by rotating the knob clockwise.
3. Battery Check

The PinPointer will buzz immediately, indicating that the battery is in good condition.

If the buzzer does not sound after switching on, replace the single 9-volt Alkaline battery.

## 4. Set the Sensitivity

A. Starting with the knob in a position where the buzzer is making sound, **rotate knob clockwise** to the point where the device is just silent. (Figure B)

B. You want to position the knob in the **most counterclockwise position at which the buzzer is still silent**. This threshold setting provides maximum sensitivity. (Figure C)

5. During use, periodically re-set the knob for maximum sensitivity.

Figure A

### Battery Cap Removal Instructions



Remove battery cap by positioning PinPointer as shown in this picture. **Push up and forward.**



Do not remove battery cap sideways. **Locking tabs could break.**

Figure B

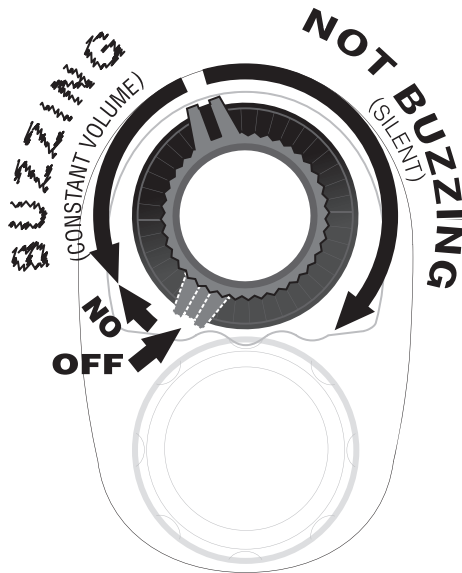


Figure C



## TREASURE HUNTER'S CODE OF ETHICS:

- Always check Federal, State, County and local laws before searching.
- Respect private property and do not enter private property without the owner's permission.
- Take care to refill all holes and leave no damage.
- Remove and dispose of any and all trash and litter found.
- Appreciate and protect our inheritance of natural resources, wildlife and private property.
- Act as an ambassador for the hobby, use thoughtfulness, consideration and courtesy at all times.
- Never destroy historical or archaeological treasures.
- All treasure hunters may be judged by the example you set; always conduct yourself with courtesy and consideration of others.

## DISPOSAL



Dispose of the packaging materials properly, according to their type, such as paper or cardboard. Contact your local waste-disposal service or environmental authority for information on the proper disposal.

Do not dispose of electronic devices in the household garbage! As per Directive 2002/96/EC of the European Parliament on waste electrical and electronic equipment and its adaptation into German law, used electronic devices must be collected separately and recycled in an environmentally friendly manner.

In accordance with the regulations concerning batteries and rechargeable batteries, disposing of them in the normal household waste is explicitly forbidden. Please make sure to dispose of your used batteries as required by law – at a local collection point or in the retail market. Disposal in domestic waste violates the Battery Directive.

## EC DECLARATION OF CONFORMITY

Bresser GmbH has issued a „Declaration of Conformity“ in accordance with applicable guidelines and corresponding standards. This can be viewed any time upon request.

## WARRANTY & SERVICE

The regular guarantee period is 2 years and begins on the day of purchase. To benefit from an extended voluntary guarantee period as stated on the gift box, registration on our website is required. You can consult the full guarantee terms as well as information on extending the guarantee period and details of our services at [www.bresser.de/warranty\\_terms](http://www.bresser.de/warranty_terms)

These operating instructions are to be considered a component of the device. Please read the safety instructions and the operating instructions carefully before use. Keep these instructions for renewed use at a later date. When the device is sold or given to someone else, the instruction manual must be provided to the new owner/user of the product.

Bresser GmbH  
Gutenbergstr. 2  
DE-46414 Rhede  
[www.bresser.de](http://www.bresser.de) • [info@bresser.de](mailto:info@bresser.de)

Errors reserved - technical specifications subject to change.

Copyright© 2010 by First Texas Products, L.L.C.  
All rights reserved. Bounty Hunter® is a registered trademark of First Texas Products, L.L.C. Made in China.