



**NightExplorer 7x50
Astronomy Binoculars**

Art. No.: 9621600



Tripod parts overview

- ❶ Tripod adapter
- ❷ Tripod connection thread
- ❸ Tripod adapter base
- ❹ Lock for tripod adapter plate
- ❺ The locking knob of the center column
- ❻ Crank for the extendable center column
- ❼ Tripod leg
- ❽ Vertical adjustment lock and swivel handle
- ❾ Horizontal adjustment lock
- ❿ Centre column
- ⓫ Locking clips
- ⓬ Rubber feet
- ⓭ Bubble level

NOTE!

Make sure that the quick clamping rings and fixing screws are always hand-tightened so that the necessary stability of the tripod is guaranteed. Check the stability before putting on a device.

Keep holding the photographic or optical device until it is balanced and secured on the tripod.

Never open the quick clamping rings and fixing screws with an attached device to prevent damage from falling.

TIPS on cleaning

Lenses (eyepieces and/or object lenses) should be cleaned with a soft, lint-free cloth (e.g. microfibre) only. Do not use excessive pressure - this may scratch the lens.

Dampen the cleaning cloth with a spectacle cleaning fluid and use it on very dirty lenses.

Protect the device against dirt and dust. Leave it to dry properly after use at room temperature.

Then put the dust caps on and store the device in the case provided.

DISPOSAL

Dispose of the packaging materials properly, according to their type, such as paper or cardboard. Contact your local waste-disposal service or environmental authority for information on the proper disposal.

WARRANTY & SERVICE

The regular guarantee period is 5 years and begins on the day of purchase. You can consult the full guarantee terms at www.bresser.de/warranty_terms.

In the event of a warranty claim, please first contact the service team responsible for your country, preferably by e-mail or by using the contact form on the website. In most cases, they will be able to help you quickly. You will find the relevant contact information under "Service" in this manual.

IMPORTANT!

Do not send in equipment - even in the event of damage - without first consulting the Service Department. Unfortunately, unsolicited units cannot be accepted and processed.

SERVICE

Please contact the service centre first for any questions regarding the product or claims, preferably by e-mail.

E-Mail: service@bresser.de
Telephone*: +49 28 72 80 74 210

BRESSER GmbH

Kundenservice
Gutenbergstr. 2
46414 Rhede
Deutschland

*Number charged at local rates (the amount you will be charged per phone call will depend on the tariff of your phone provider); calls from abroad will involve higher costs.

Contact

Bresser GmbH
Gutenbergstraße 2
46414 Rhede · Germany
www.bresser.de

     @BresserEurope



Copyright 2021 © Bresser GmbH
Errors and technical changes reserved.

Manual_9621600_NightExplorer-7x50_en_BRESSER_v042021a