
Vixen

DIRECT WIDE PHOTO ADAPTER 60MM

This photo adapter can be used on R200SS and VC200L telescopes.


1. Attaching to the R200SS telescope

Not only an optional T-Ring but also an optional Coma Corrector R200SS is required to be used with this photo adapter.

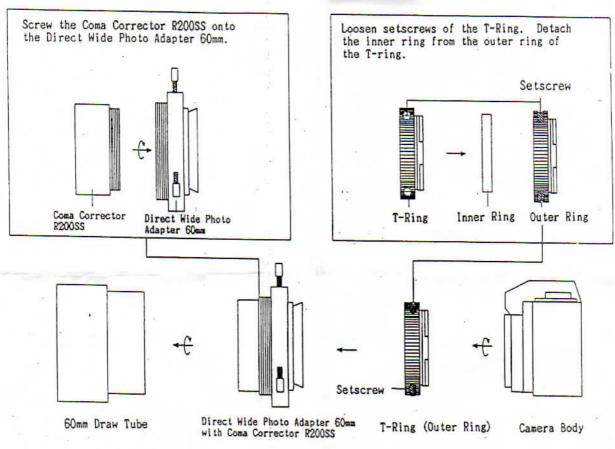

Attach the T-Ring to the Direct Wide Photo Adapter 60mm and lock it with the setscrews.

2. Attaching to the VC200L telescope

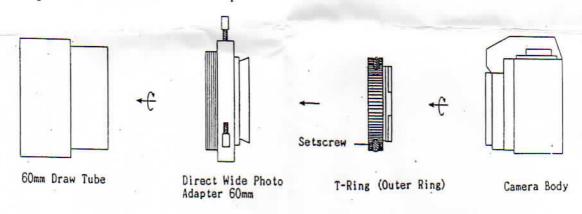

Attach the T-Ring to the Direct Wide Photo Adapter 60mm and lock it with the setscrews.